

Installation Instructions


JF50S BRACKET

EAW DWG NO 480360 (0)

1. Inventory

Before beginning installation, inventory kit to items listed.

| Item | EAW P/N | Qty | Description |
|------|---------|-----|-------------------------------------|
| 1 | 606073 | 1 | Bracket, HD50WM |
| 2 | 102246 | 2 | Screw, 3/8-16 x 1-1/2 SHCS, Black |
| 3 | 105062 | 2 | Washer, Neoprene, 3/8 I.D. X 1 O.D. |
| 4 | 105010 | 2 | 3/8 Washer, Flat, Black |
| 5 | 105011 | 2 | 3/8 Washer, Lock, Black |

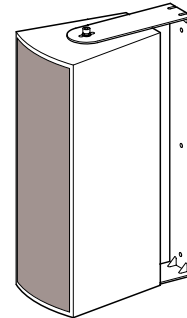

WARNING: Installation should only be done by an experienced technician. Improper installation may cause serious injury. The surface where the bracket/cabinet is to be fastened must have enough structural integrity to support 300 pounds.

2. Mounting the Bracket

Due to various construction methods and materials used today, the hardware for securing the bracket to the mounting surface is not supplied. It is recommended that you consult a building professional for the proper mounting hardware before mounting the bracket.

3. Removing the Shipping Hardware

Remove the flat head screws from the top and bottom of the cabinet using a 7/32 Allen wrench.

4. Hanging the Cabinet

- Place a neoprene gasket on the bracket's lower arm. Center it on the slot.
- Position the cabinet between the bracket arms.
- Align the bracket's top slot to the cabinet's 3/8-16 threaded hole.
- Holding the cabinet in position, insert the screw with its lock washer and flat washer through the bracket's slot and into the cabinet's top threaded hole and hand tighten.
- Repeat step D through the bottom bracket slot.
- Position cabinet and tighten the top & bottom mounting screws with a 5/16 Allen wrench.

